

## 15' Pole Tree With Cable Wire Instruction *Autograph Foliages*

1. take out the foot frame and accessories from the carton.

Include below parts: main trunk-1 pcs, foot slice- 2 pcs, M6\*16MM six corner screws- 2 pcs, M8\*50MM six screw nut- 4 sets, M6 six corner wrench- 1 pcs, M8 six corner wrench- 1 pcs)



2. As shown in the figure, make sure you match number to number



3. as shown, please insert the six angle screw nut M8\*50MM to the connection and tightened. On the upper part of the stand please insert six angle screws M6\*16MM and tightened.




4. Please make sure tightened all the screws on the stand





5. the cable wire is attached at the section B which is below the tree top

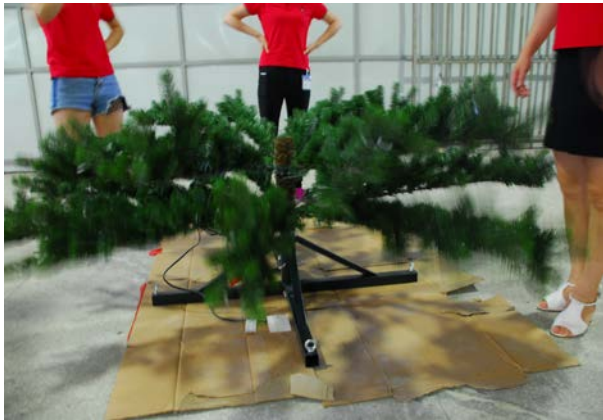

6. after the whole tree is assembled, 4 wire ropes are attached to the branch, please untie the wire and hook to the metal stand





7. make sure all 4 wires are attached to the metal stand

